

 **Smith
Corona**

HP-400
Telephone



User's Manual


(Model no : HP-400)

Contents


1. Contents
2. Feature
3. Function of each part
4. Setting up of Caller ID functions
5. Using as a Caller ID telephone
6. Installation of telephone
7. Setting and adjustment of function key
8. Controlling microphone volume
9. Tone control switch
10. Installing headset hanger
11. Programming tone ringer
12. Using the telephone
13. Using the handset (Option)
14. Storage & Handling

1. Contents

- Caller ID telephone
- Headset (Option)
- Telephone line cord
- Extension cord
- Operating manual
- Headset hanger
- Handset (Option)

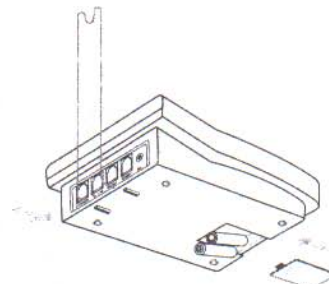

2. Feature

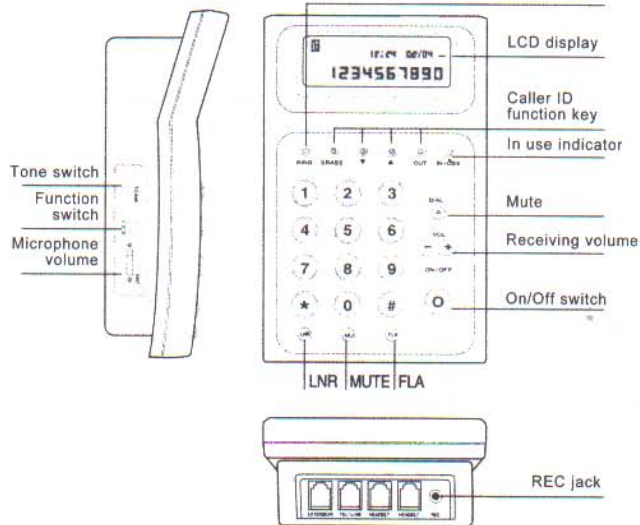

* Please refer to the function of each part as following page.


3. Function of each part

Part		Function
LCD display		- Refer to NO. 4
LED lamp	In use	- LED lights in telephone call / LED blinks MUTE
	Ring	- LED lights in ringing
On/Off		- Making a call or hang up the phone
Dial		- Press it when making call
Mute		- Transmit signal mute - Selection of telephone ringing (Refer NO. 10)
Receiving volume		- Receiving volume control
LNR		- Last number redial key
RP		- The last dialed number can be repeated automatically going on hook by pressing RP key
FLA		- Receiving call can be transferred to the other phone when using key-phone
REC		- Recoding can be done by external recorder connecting stereo cord of 3.5mm (Option)
Function switch		- Refer to No. 5
Tone switch		- High tone increase and decrease
Headset jack		- Headset connection jack
Handset jack		- Handset connection jack
Tel/Line jack		- Telephone line jack
Extension jack		- Extension jack to connect other phone
Microphone Volume		- Transmit signal level control

4. Setting up of Caller ID functions


1) The description of LCD Display.

- ① Call # & Memory
- ② New call indicator
- ③ Repeated call indicator
- ④ Call receiving time
- ⑤ Call receiving date
- ⑥ Battery low indicator
- ⑦ Caller's telephone number and calling time
- ⑧ Call / Receiving indicator
- ⑨ Caller ID function key

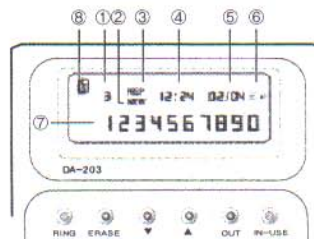


2) Install the batteries

Open the battery compartment on the bottom of telephone and install 3 × AAA batteries. The first picture will appear on the LCD display.

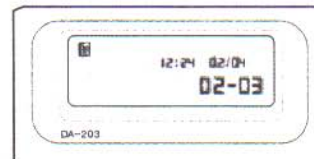

3) Connect your telephone


Connect the telephone line cord to the line jack of telephone set and connect the other part of telephone line cord to telephone terminal of the wall.

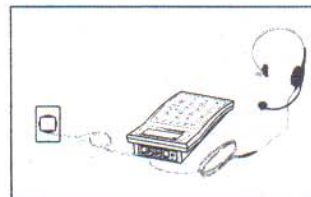

Following screen will appear on the you install telephone properly.



4) Set the time and date

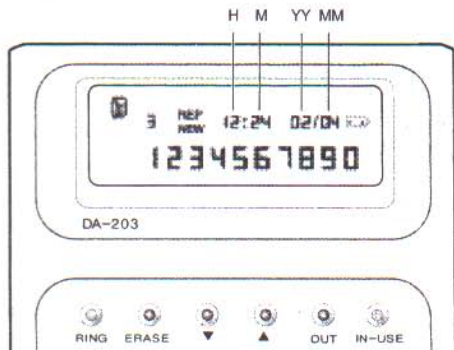

- Press [▲] button and hold for about 5 seconds and the cursor on the display will blink as "-----".
- Press [Dial] button and change it into the adjustment mode of time and date.
- Adjust the time and date by [▲] [▼] and move the position of time and date to be set by pressing [ERASE] button.
- Press [DIAL] button two times and return as a receiving mode.

*Notice

The time and date can be set automatically when you receive a call. Please call to your telephone from other telephone if you don't want several procedures to set the time and date.

5) Set your area code

When you use this unit first, or you move to an area of the country that has a different area code, you must enter your area code.

- Press [▲] button and hold for about 5 seconds and the cursor on the display will blink as "-----".
- Press [▲] button and the blinking cursor changes into the number.
- Press [▼] button and the blinking cursor moves next place.
- Press [DIAL] button three times at an interval of one second after inputting area code and the area code will be saved and return as receiving mode.

Ex) 031

Press [▲] button and hold for about 5 seconds → Press [▲] button until "0" appear → Press [▼] button → Press [▲] button until "3" appear → Press [▼] button → Press [▲] button until "1" appear → Press [DIAL] button three times at an interval of one second.

5. Using as a Caller ID telephone

Caller ID service

Caller ID allows the caller's phone number to be shown on the display before you answer the call in order to use this feature, you must first subscribe to Caller ID service with your telephone company. The name of this service may vary depending on your telephone company. Before using the feature, please make sure you have properly entered your area code as explained in "Entering your area code"

When you receive a call - The phone number appears on the display with the day and time as shown in the following example. The day and time information is received from your telephone company. If the call came from a different time zone, it will still show the time in your area.

Important notes.

The Caller's phone number will not be displayed in the following cases :

The call is made through a telephone company which does not offer Caller ID service (including long distance and international calls). In this case, "Out of area" will be displayed.

The call was blocked. For privacy reason, many states allow callers the option to prevent his or her telephone data from being displayed on the other party's Caller ID display. If you receive a call which was blocked in this way, "PRIVATE" will be shown on the display.

An error data is received. When "ERROR" is shown on the display, the telephone number may include some error digits.

Viewing the Caller ID list

This phone automatically stores the data of the last 60 calls received. It keeps track of all calls received, even if they were not answered.

You can also view the data during conversation.

- 1) To display the older date - Press the [▲] button
- 2) To display the newer date - Press DOWN button. If you press the [▼] button repeatedly, and view all the data. "END" will appear on the display.
- 3) "OUT OF AREA" or "PRIVATE" data is also counted as one call.

Using new call alert function

This phone is equipped with a "NEW" indicator when there is any Caller ID data that is not reviewed.

Erasing data from the Caller ID list

The phone maintains the data of the last 60 calls in memory. If there is a new call after those 60 calls, the oldest number will be automatically erased and the new call will be stored.

To erase all the stored numbers at a time - Press and hold [EARSE] for 5 seconds.

Checking your area code

1. Press [▲] button and hold for about 5 seconds.
2. The area code appears on the display.
3. Push up On/Off switch and make it OFF mode

Calling back a number from the Call ID list


You can easily call back a number from the Caller ID list by pressing the [DIAL] buttons.

1. Press [▲] or [▼] button to select the number you wish to dial.
2. Press the On/Off switch and make it in ON mode.
3. Press the [DIAL] buttons.
4. The speaker will turn on, and dial out the number automatically

6. Installation of Telephone

- Connect the telephone line cord to the line jack of telephone set
- Connect the other part of telephone line cord to telephone terminal of the wall.
- Connect the headset to headset jack of telephone set.


Picture 1

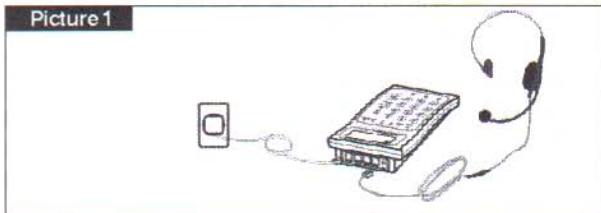

- If you want to use extra telephone connecting to telephone, connect the extension cord to the extension jack of the telephone.


Picture 2

Line jack of extra telephone and connect the other plug of extension Jack of the telephone

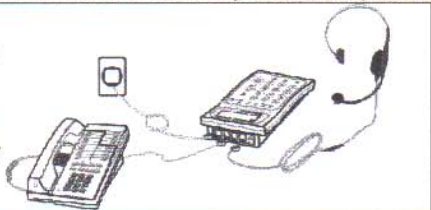

- Connect the telephone cord to the MODEM of computer.


Picture 3

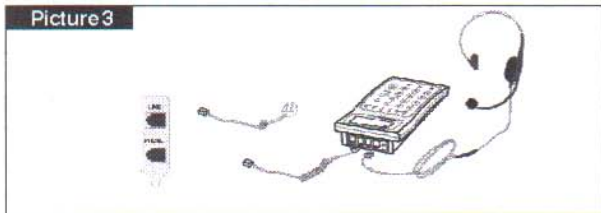

7. Setting and adjustment of function key


Function key is positioned to the left side of DA-203 telephone (Factory set-up)

Function key

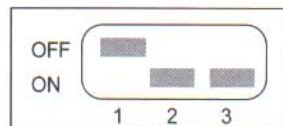


1) Key no. 1 : Tone or Pulse

- No. 1 to "OFF" : TONE
- No. 2 to "ON" : PULSE

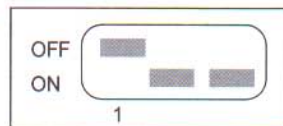

2) Key no. 2 to "ON"

Simultaneous call selection

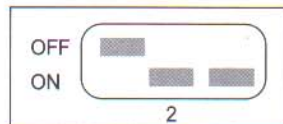


Please connect extra telephone to the extension jack of the telephone using extension cord.

If the key no. 2 is to ON, you can transfer the telephone call to other telephone or listen the telephone contents of telephone.

3) Key no. 3 to "ON"


: Bell sound control

- On : Bell sound increase
- Off : Bell sound decrease

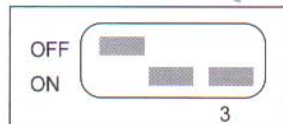


8. Controlling microphone volume

- 1) Transmit level increase when you move the microphone volume controller to ⊕ position
- 2) Transmit level decrease when you move the microphone volume controller to ⊖ position

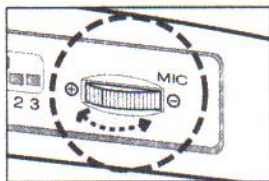



9. Tone control switch

- 1) High tone increase : to the right
- 2) High tone decrease : to the left

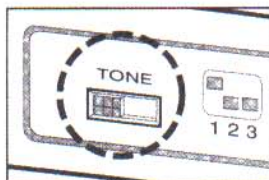

10. Installing headset hanger

Align the headset hanger with the projection part of telephone side, push and fix the headset hanger.

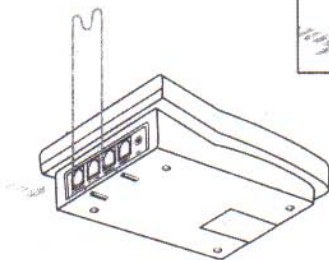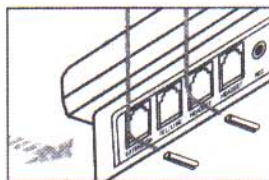

11. Programming tone ringer

- Please set On / Off switch to be off hook
- Pressing MUTE button and # button. Please change dial no. as follows.

Dial NO.	Repetition rate
3	One time (Slow)
6	Four times (Normal)
9	10 times (Fast)
0	None (When dial no. 0 has programmed, the device will be automatically return to the previous setting by next off-hook)

12. Using the telephone

1) Receiving

- When ringing (Ring LED), wear the headset, press On/Off switch and talk over the telephone with the caller.

2) Making a call

- Wearing the headset, press On/Off switch and the dial no. that you want to call.

13. Using the headset (Option)

- Connect the offered headset to the headset jack
- Set the hook switch which is located in the inside of headset to ON when you use the headset for telephone call.
- Set the hook switch which is located in the inside of headset to OFF when you use the headset for telephone call.



14. Storage & Handling

1) Storage

Avoid the places that have direct sunlight, ill ventilates, moistures, trembles, dusts or electrical noises.

2) Notice

- Do not modify or decomposes this product by yourself.
- Do not handle this product with wetted hand.
- Clean the surface of this product with dry soft cloth.
- Keep the headset away from dust and dirt, which can cause premature wear of parts.
- Wipe the headset with dampened cloth occasionally, or cleaning solvents to clean the headset.

Warranty

We will repair or replace, at our opinion, this product if found defective due to materials or workmanship within the warranty period beginning the from the original date of purchase. It is warranted by authorized representative for the period specified.

The original dated purchase receipt must be presented to the authorized service center when the service is rendered. On all carry-in models, transportation to and from the service station is the responsibility of the purchaser.

This warranty does not cover damages due to accident, fire, flood, earthquake and or other acts of god ; misuse, incorrect line voltage, improper installation or unauthorized repairs, commercial use or damages occurred in shipping. Exterior and interior finish, lamp, glasses, plastic parts and temperature probes are not covered under this warranty. Customer adjustment according to the owner's manual are not covered under this warranty. This warranty is automatically void if the serial no. is missing or altered.

WARRANTY CARD

Mr./Mrs./Miss/Co.

Telephone No.

Address

Model No.

Brand

Serial No.

Invoice No.

Dealer

Date of Purchase

Note : THIS WARRANTY CARD WILL BE VOID IF IT IS NOT MAILED BACK TO OUR COMPANY WITHIN 10 DAYS FROM DATE OF PURCHASE, WARRANTY CONDITIONS (PLEASE SEE OVERLEAF)